



51 Series Service Instructions

Warning!!! Relieve All Pressure In The Line Before Servicing Filter Assembly

- Follow all company and OSHA safety rules, such as wearing protective gloves and eye wear, etc.
- Turn the filter bowl off in a counter-clockwise direction.
- Pull the filter element off the post in the filter head.
- Change element and be sure it has a new seal..
- Remove and discard the seal located above the threads in the head.
- Install a new seal above the threads in the filter head.
- Using proper lubricant compatible with your system, apply to the outlet port of the element.
- Using proper lubricant compatible with your system, apply to the threads of the filter bowl.
- Inspect the threads of the filter bowl for debris and clean thoroughly.
- Carefully, thread the bowl into the head and assemble, torque to 35 ft. lbs.
- While the system is re-pressurizing, check for leaks.

If the element or filter assembly has to be cleaned. Please ship all the components, including the filter label, to an approved Chase facility.